



PACKAGE CONTENTS:

- (2) Bow Extensions
- (2) Arrow Extensions
- User's Guide/Warranty Card
- Registration Card

HOW TO SET-UP THE BOW AND ARROW EXTENSIONS:

1. Be sure that the Wii Remote is inside of the original Wii Remote Jacket.
2. Insert the Wii Remote with jacket into the Bow Extension.
3. Attach the elastic remote strap across the Wii Remote by placing the strap on the designated tabs located on both sides of the Bow Extension. The strap should fit between the directional button and the A button on the Wii Remote.
4. Insert the Nunchuk into the Arrow Extension.
5. Place your hand through the wrist strap on the Arrow Extension.
6. To remove the Wii Remote from the Bow Extension, detach the elastic strap from the tabs on both sides of the Bow Extension. Remove the Wii Remote from the Bow Extension.
7. To remove the Nunchuk from the Arrow Extension, lift the Nunchuk up and out by pulling on the cord.

NOTE: Be sure to wear the attached wrist strap included on the Arrow Extension. This allows you to use the Bow and Arrow Extensions effectively. For your safety, please **DO NOT** let go of the Arrow Extension when playing Wii games.

NOTE: Use the IR Port on the Bow Extension to navigate through the menus. The Wii Remote can remain inside the Bow Extension while navigating.

NOTE: Always practice safety first. Be sure the Wii Remote is attached properly and securely to the extension. Be aware of your surroundings and stay a safe distance from all objects. **DO NOT** ever swing the Wii Remote at anyone or anything.

DISCLAIMER: dreamGEAR is **NOT** liable for any direct, indirect, punitive, incidental, special, consequential damages, or any damages whatsoever arising out of or connected with the use or misuse of this product.